

Laundry Card Kiosk Instructions

 
WASH

The laundry machines at this property use a contactless laundry card system.

Buy a new laundry card:



Press **Buy Card** on the display (new card cost will be displayed)

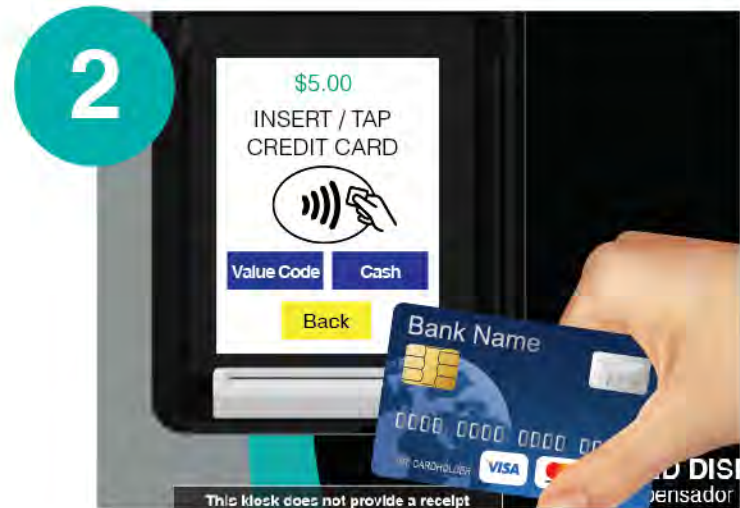


Follow instructions on the screen to purchase with your credit/debit card

New cards purchased from kiosk contain \$0 value and must be loaded with funds.


Add value to laundry card:



 
Hold your Laundry Card near the display (the card balance will appear)

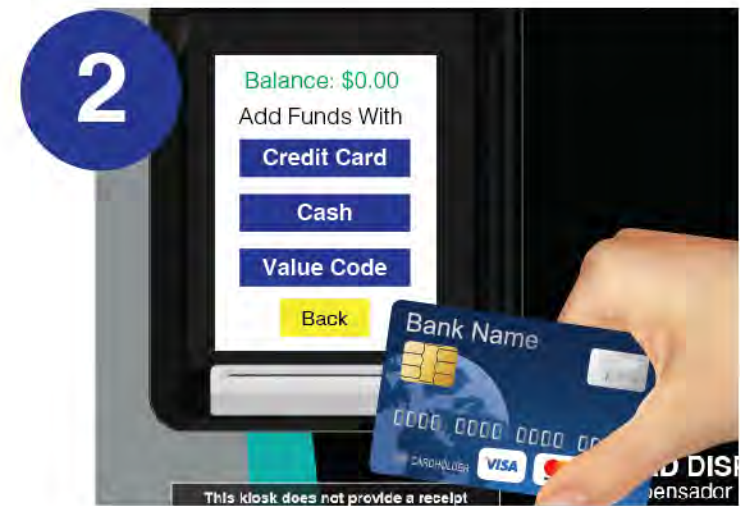

 Follow instructions on the screen to use your desired payment option or enter a value code.

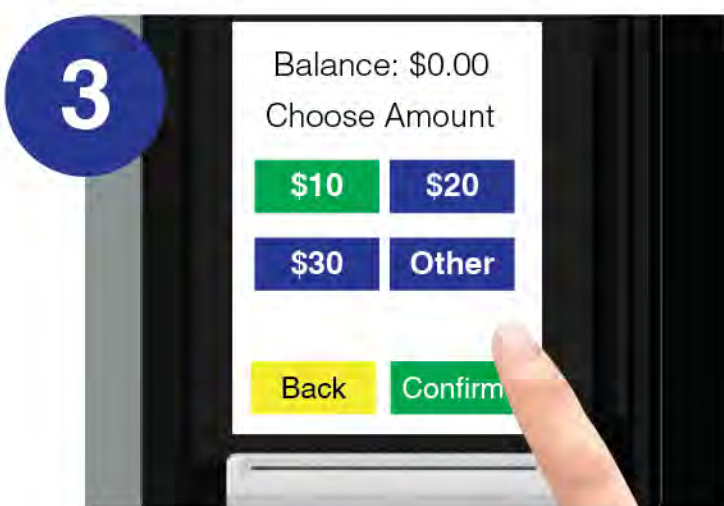

 Select and **Confirm** the amount of value you want to load on the Laundry Card

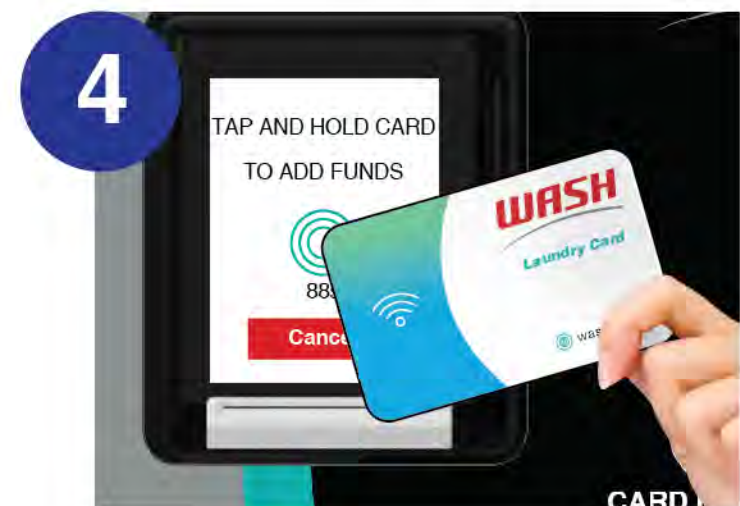

Follow the instructions on the screen and hold your Laundry Card near the display to finish adding value